




## INSTALLING INTERNAL STRAPS ON A SPORTUBE



**PLACE WASHERS IN  
VELCRO STRAP POCKET**

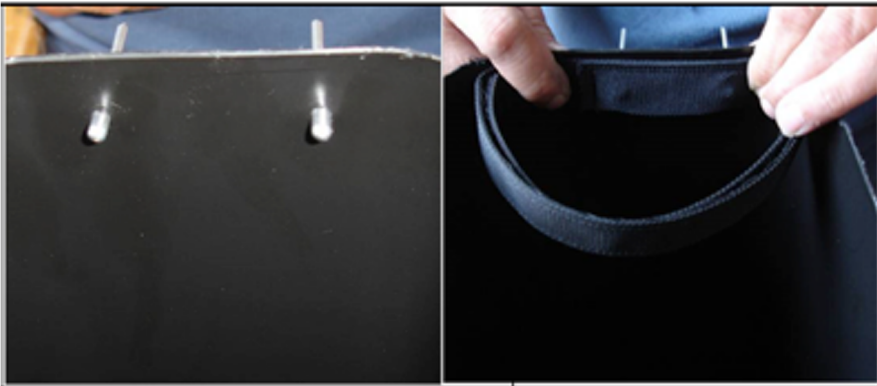

**FIT THE RIVETS THROUGH  
THE PLASTIC, THE VELCRO  
STRAP AND THE WASHER.  
RIVET IN PLACE, DO THE  
SAME FOR THE OTHER  
SIDE.**